










16kWh 14 units Parallel Operation








Precautions









1. Before parallel the 16kwh battery, please make sure the difference soc between each battery is kept in 5% range.
2. Please use busbar for the parallel system, and the busbar should bear the maximum output of the inverter.
3. When parallel the battery, make sure the length of power cable that connect to the busbar are the same.
4. When parallel the battery, make sure the address dial code, function dial code on each battery is correct. Inverter dial code is only dialed on the first battery that is connected to the inverter. Refer to the picture for the setup.

Example: Connect with Deye inverter.

	Address	Inverter	Function
First			
Middle			
Last			

Address dial code:

Code	Dial Switch Position	Definition
1		Set as battery 1 (communicate with inverter by this battery)
2		Set as battery 2
3		Set as battery 3
4		Set as battery 4
5		Set as battery 5
6		Set as battery 6
7		Set as battery 7

8		Set as battery 8
9		Set as battery 9
10		Set as battery 10
11		Set as battery 11
12		Set as battery 12
13		Set as battery 13
14		Set as battery 14
15		Set as battery 15

- When starting the parallel system, the breaker on the battery should on close first, and then push the power button to start the battery.